

## **Electric Fence Monitoring**

Monitor the voltage on your electric fence and receive alerts when the energizer is off, the voltage is low, or the fence wire is broken.

Save time not having to drive around checking fencing.

Monitor whether gates are closed and the level in your water tank.

Receive email and SMS alerts



Connect a PTE0705 or other electric fence monitor to the voltage, RS232, or RS485 inputs.

Inbuilt GPS accurately pinpoints the location of the fault.

Inbuilt accelerometer measures tilt of gate posts.

Monitor gate closure with a reed-switch connected to a voltage input.

Monitor water tank level with a 4-20mA pressure sensor.

